


# C series and UP battery locks

Instructions for tamper resistant battery compartment on the IFCSW61/62/71/81 and UP967/77/88 models

Insert the right/left indicator into the hearing aid. This is then visible on the bottom of the battery drawer.

The coloured marker will be set to the left (unlocked position) as a default, use the battery lock tool which comes with the aid to push the coloured marker to the right to lock the battery drawer.

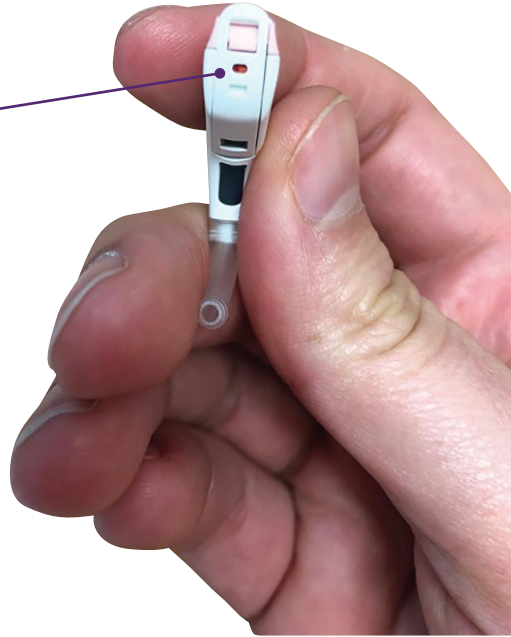

Audiologist contact details: